

LF-GSD065YI

AC100-277V DALI Dimmable NFC Constant Current LED Driver



Product family features

- DALI&PUSH dimmable
- Standby power consumption $\leq 0.3W$
- Suitable for Class I light fixtures
- 5 years guarantee



Product family benefits

- Advanced functions: EL, CorridorDIM, CLO
- Supports DALI-2 Part 251, 252 and 253
- Output current and parameters adjustable via NFC
- According to Class P, FCC, CE, UL, UKCA
- According to Zhaga Book 13, 24
- Surge level: PUSH: 1kV, L-N: 1kV, L/N-PG: 2kV

Typical applications

- For linear light and tri-proof light
- For office, decorative, and commercial lighting

Product parameters

- | | |
|-----------------------------|---------------------------|
| — Output current 150-1400mA | — Output voltage 10-56Vdc |
| — Output power 8.4-65W | — Efficiency 91% |
| — Input voltage 90-305Vac | |
-

Electrical data

Input data

Rated input voltage	100...277V		
AC voltage range	90...305V		
Mains frequency	0/50/60Hz		
DC voltage range	100...277V		
Power factor	≥0.95		
Efficiency (in max. Power) ¹⁾	≥91%		
THD	≤10%		
DC input current	0.04...0.73A		
Input current	0.65A Max/120V	0.35A Max/230V	0.3A Max/277V
Inrush current ²⁾	96A	100A	150A
Loading number on circuit breaker 10 A (B)	8	7	5
Loading number on circuit breaker 10 A (C)	13	12	8
Loading number on circuit breaker 16 A (B)	11	12	8
Loading number on circuit breaker 16 A (C)	17	20	13
Protective conductor current	≤0.7mA		
Stand-by power	≤0.3W (when DALI OFF)		

Output data

Nominal output voltage	10...56V
Nominal output current	150...1400mA
Default output current	150mA
Current setting	NFC/programmer
Maximum output power	65W
Nominal output power	8.4 ... 65W
Output ripple current (100 Hz)	±3.3 %
Flicker	According to IEEE Std 1789-2015
CIE SVM	≤0.4
IEC-Pst	≤1
Current tolerance ³⁾	±5%
Temperature tolerance	±10%
Start-up time	≤1.5S

Safety

Withstanding voltage	I/P-O/P: 3.75kV&5mA&60S; I/P-DA1/DA2, DA1/DA2-PG, I/P-PG 1.5kV&5mA&60S
Surge capability (L-N)	1 kV
Surge capability (L/N-PE)	2 kV
PUSH ⁴⁾	1 kV
Insulation resistance	I/P-PG, I/P-DA1/DA2, DA1/DA2-PG: >100MΩ@500VDC
Guarantee	5 years ⁵⁾

1) 91% is the typical value tested in the max. load of 56V

2) t =102μs (120Vac), 130μs (230Vac), 108μs (277Vac)


3) Output current tolerance is ±10% when the output current is ≤400mA

4) The surge test wiring at the PUSH terminal is connected in parallel with L-N


5) 5 years @Tc≤75°C

Characteristic diagrams


Operating Window

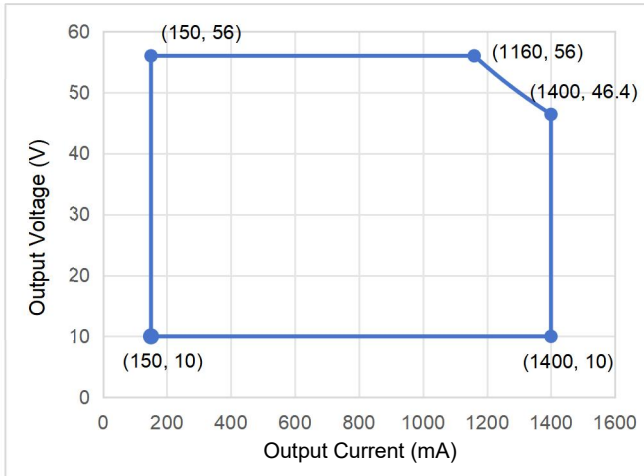


Typical Efficiency vs Load

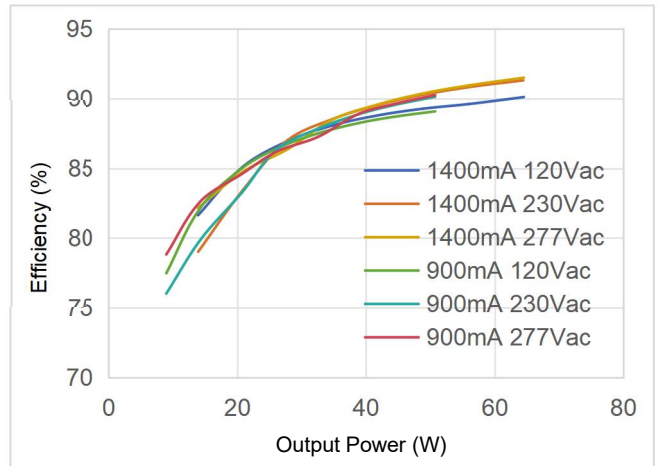


Typical Power Factor vs Load

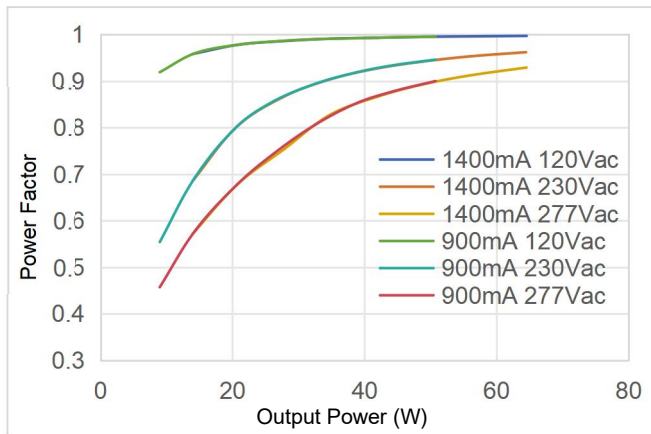


Typical THD vs Load

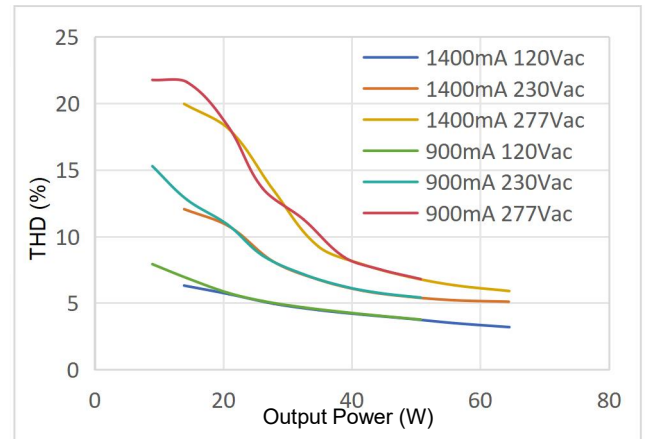

Lifespan

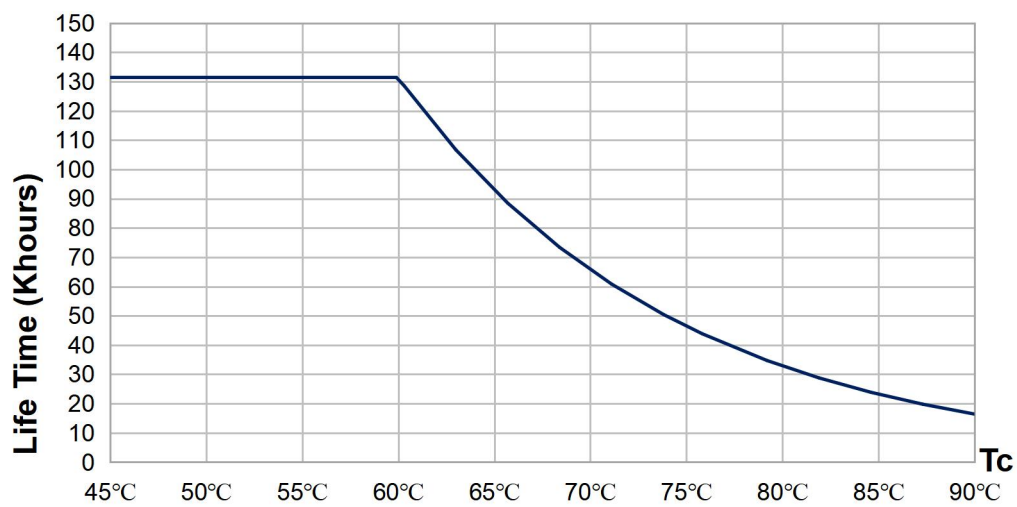

Dimensions (Unit: mm)

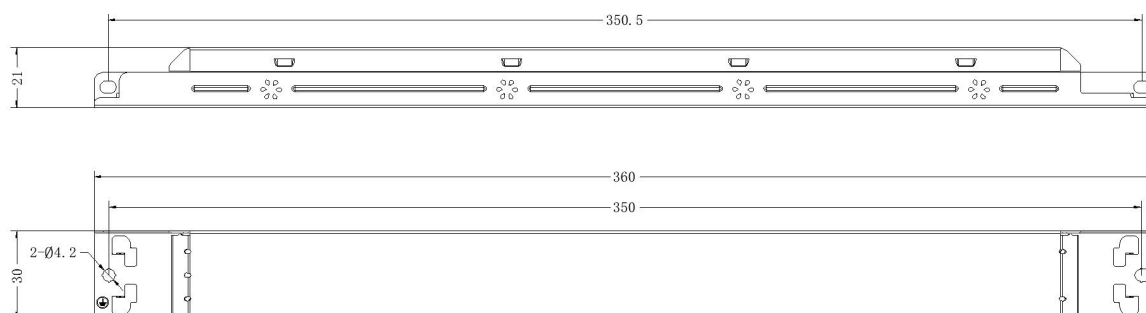

Mounting hole spacing, length	350±0.2mm
Product weight	330g
Cable cross-section, input side	0.5 ... 1.5 mm ²
Cable cross-section, output side	0.5 ... 1.5 mm ²
Wire preparation length, input side	7 ... 8mm
Wire preparation length, output side	7 ... 8mm
Length	360±0.2mm
Width	30.0±0.2mm
Height	21.0±0.2mm

Colors & materials

Casing material	Color coated sheet
Casing color	White

Temperature & operating conditions

Ambient temperature range	-30°C - +60°C
Maximum temperature at tc test point	90°C
Temperature range at storage	-20°C - +80°C (6 months in Class I environment)
Humidity range at storage	10-90%RH (no condensation)
Humidity during operation	20-90%RH (no condensation)
Atmospheric pressure	86-106KPa
RoHS	RoHS 2.0 (EU) 2015/863

Tc test point (Unit: mm)




Tc point is at the top of LED driver

Product terminal

Input		Output	
AC-L (Gray)	AC live wire input	LED+ (Red)	Positive terminal output of LED driver
AC-N (Gray)	AC neutral wire input	LED- (Black)	Negative terminal output of LED driver
NC	/	NTC- (Black)	Negative terminal input of NTC
 (Gray)	Earth wire	NTC+ (Green)	Positive terminal output of NTC
DA1 PUSH (Green)	DALI1/PUSH dimming input	NC	/
DA2 PUSH (Green)	DALI2/PUSH dimming input	NC	/
NC	/		

Wiring diagram of output terminal

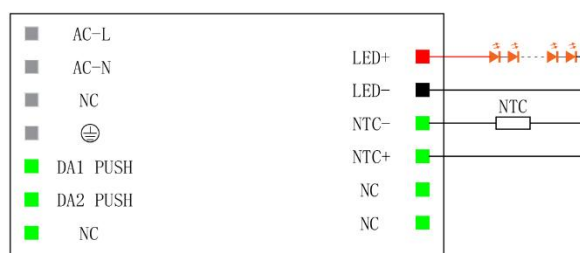

Capabilities

Dimmable	DALI/PUSH dimmable
Dimming range	1 ... 100%
Over-temperature protection	Default: output derating, which is configurable via NFC
Short circuit protection	Hiccup mode (Automatic reversible)
No-load protection	≤59V
Suitable for fixtures with prot. class	I
Programming interface	DALI / NFC
Control interface	DALI
Number of channels	1 channel
CorridorDIM	Yes
EL	Yes
CLO	Yes
DALI Part 251 252 253	Yes


OTP protective characteristics

Protective Type				Typ.	Introduction
External over-temperature protection	Mode 1	If the temperature is too high, decrease the current first and then turn off the light.	R1 (Start to decrease the current)	1.65K Ω	When the external NTC resistance decreases to R1, the external thermal protection is triggered and the output current gradually decreases.
			R2 (Stop decreasing the current)	1.27K Ω	When the external NTC resistance decreases to R2, the output current drops to the programmed protection current value and stops decreasing (default 50%I _{out}).
			R3 (Turn off the light)	1.11K Ω	When the external NTC resistance decreases to R3, the light will be off and it needs to restart the AC to restore.
	Mode 2	If the temperature is too high, turn off the light.	R3 (Turn off the light)	1.11K Ω	When the external NTC resistance decreases to R3, the light will be off and it needs to restart the AC to restore.

Remark: The recommended NTC model is NTSE0103FHM57A with a resistance of 10k Ω


Dimming function instructions

• DALI dimming function

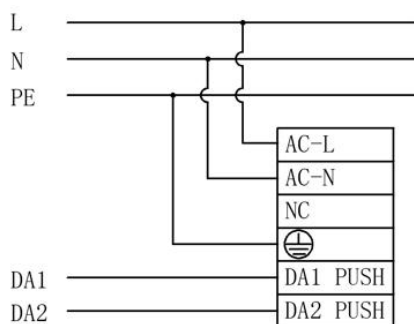


Wiring diagram of DALI dimming

- ① Default setting brightness is 100%.
- ② Connect DALI signal to DA1 PUSH and DA2 PUSH.
- ③ DALI protocol includes Max.16 scene groups.
- ④ Maximum number of LED drivers connected in parallel in DALI dimming mode: 64 pcs.
- ⑤ Minimum dimming depth of DALI dimming: 1% (@The maximum output current; the dimming depth of different masters will vary).

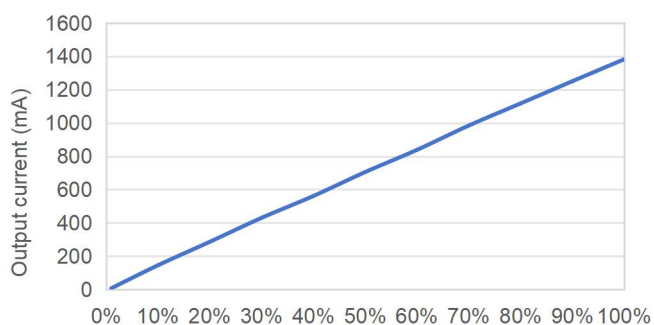


Linear dimming

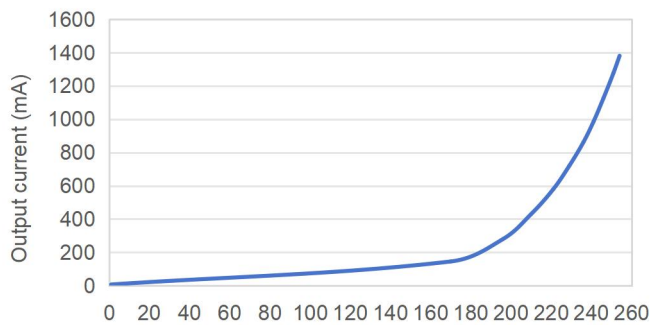

Logarithmic dimming

Note: The DALI and PUSH dimming functions cannot be used simultaneously; otherwise, the DALI dimmer will be damaged.

• PUSH dimming function

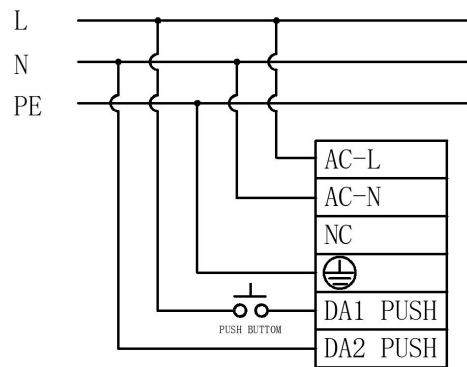

Wiring diagram of PUSH dimming


Switch from DALI mode to PUSH mode: short press PUSH switch to enable PUSH dimming function

- ① Connect PUSH switch between AC-L and DA1 PUSH in series and connect DA2 PUSH to AC-N.
- ② Make sure that AC-L and AC-N are NOT directly connected to DA1 PUSH and DA2 PUSH terminals.
- ③ Make sure that PUSH switch is off before the AC is powered on; operate PUSH after the AC is powered on.
- ④ Make sure the PUSH switch is off before disconnecting the AC.
- ⑤ If you have any questions about the wiring and operation, please confirm with Lifud FAE.
- ⑥ Wrong wiring or operation may cause damage to the driver.

Operation	Duration	Function
Instant Push	0.1-0.5S	LED light on/off
Long Push	0.6-9S	LED light dims up/down
Reset Push	> 9S	Reset the brightness of luminaire to 50%

- ① The PUSH operation won't cause any variations on LED driver if it's less than 0.1S.
- ② Minimum dimming depth of PUSH dimming: 1%
- ③ The PUSH dimming mode has the memory function in case of any power failure. When the LED driver is powered on again, the light will return to the previous state before power failure.
- ④ The present dimming direction of PUSH dimming is opposite to the former one.
- ⑤ In automatic mode, long press for more than 3 minutes to enter the corridor dimming function (After AC power failure, the last dimming direction will not be memorized).
- ⚠ ⑥ Maximum voltage of PUSH dimming can be up to 264Vac. PUSH dimming is not supported when the input voltage is 277Vac.

• Corridor dimming function

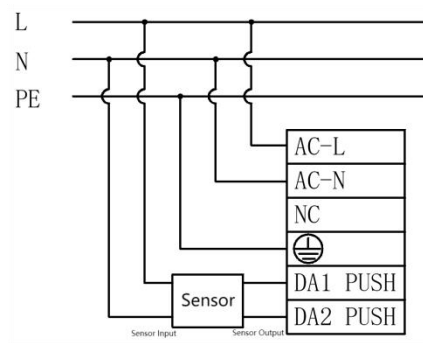

Wiring diagram of corridor dimming

Operations for entering corridor lighting mode

Approach 1: use Lifud programmer to enable the driver's corridor lighting mode and set parameters.

Approach 2: keep pressing PUSH for 3+ mins so as to switch to the corridor lighting mode.

Approach 3: keep the effective sensing signal for 3+ mins (set the sensor's hold time to 3+ mins) to enable the corridor lighting mode.

Remarks:

1. In the automatic detection mode, the driver can be switched from PUSH mode to corridor lighting mode by approach 2 and 3, and its brightness will dim up to 50%; long press for 3 mins and then it dims down first and then dims up, which means the driver has entered the corridor lighting mode.
2. After activating the corridor dimming mode, PUSH DIM is turned off.
3. In the case of AC input and any level of brightness in the corridor lighting mode, switching to DC and then returning to AC will restart the corridor lighting mode.

Operations for exiting corridor lighting mode

Approach 1: use Lifud programmer to choose other modes and exit corridor lighting mode.


Approach 2: connect the driver to the DALI master to send DALI command, and the driver will return to the DALI dimming mode.

Approach 3: connect the driver to the PUSH switch and continuously press the switch 10 times within 10 secs, and the driver will return to the PUSH dimming mode.

Remark:

1. The 3-sec or above single press or release will cause the press number to be counted as 0.
2. The approach 2 and 3 CANNOT be used if the corridor lighting mode of driver is set via Lifud programmer.

Working process of corridor dimming mode

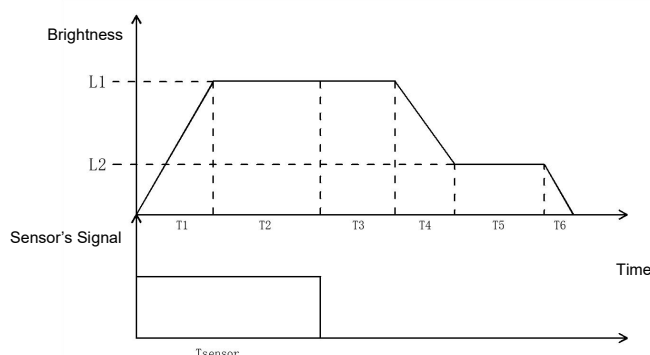

Symbol	Name	Default value	Available setting scope
T1	Fade-in time of sensing	1s	0-100s
T2	Holding time of sensing	Depends on sensor	Depends on sensor
T3	Waiting time of sensing	180s	0-59999s, 60000s (infinite)
T4	Fade-out time of sensing	5s	0-100s
T5	Unattended time	60000s (infinite)	0-59999s, 60000s (infinite)
T6	Fade-out off time	5s	0-100s
L1	Sensing brightness	100%	0-100%
L2	Unattended brightness	10%	0-100%

Emergency function instruction

The default output current is 15% I_{o max} in the case of DC emergency input.

Emergency input voltage: 100-277Vdc

Note:

1. Emergency function can be set by Lifud programmer and programming software(or FEIG NFC reader)
2. It can be set from 0 to 100%.
3. If the emergency mode is off, input current is DC and the working mode is the same as the AC input.
4. In the case of mains input, the brightness is random when using PUSH dimming. When the driver enters the emergency escape lighting system and then reconnects AC, the light brightness will remain the one set via PUSH switch when mains is connected.
5. In the case of mains input, the brightness is random when using DALI dimming. When the driver enters the emergency escape lighting system and then reconnects AC, the light brightness will return to the brightness when DALI is powered on.

Programmer tools and software


Product	Name	Brand	Model	Software
	NFC desktop programmer	FEIG	ID CPR30+	Lifud SmartSet
	NFC handheld programmer	FEIG	ID ISC.PRH101-USB	Lifud SmartSet
	NFC batch programmer	FEIG	ID ISC.LRM1002-E ID ISC.ANT300/300-A	Lifud SmartSet
	Lifud programmer	LIFUD	LF-SCS080C	Lifud SmartSet
	NFC App	LIFUD	-	Lifud NFC

Read/write and parameter configuration

Programming project	Default settings	Parameters settings	Read/Write
Production information	-	No	Read
Output current	150mA (default)	Yes	Read/Write
Operating mode	Automatic detection (DALI/PUSH)	Yes	Read/Write
EL	15% (default)	Yes	Read/Write
CorridorDIM	Inactivated	Yes	Read/Write
CLO	Inactivated	Yes	Read/Write
DALI Part 251	Activated	Yes	Read/Write
DALI Part 252	Activated	Can only be reset	Read/Write
DALI Part 253	Activated	Can only be reset	Read/Write


NFC function instructions

①NFC

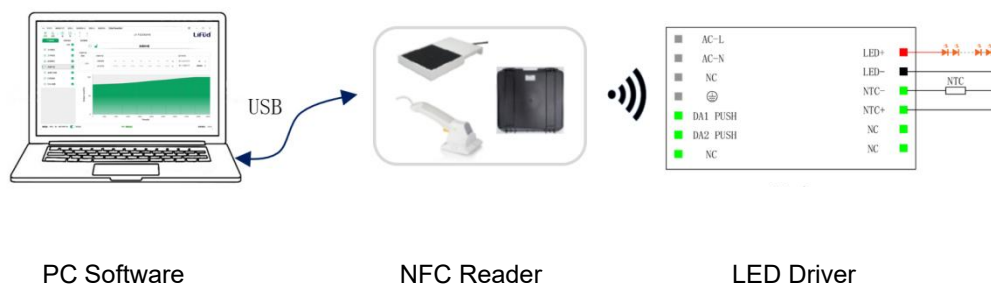

Note: When using the NFC reader, the driver is not allowed to operate while powered on. The driver must be powered off and completely discharged before it can read and write normally.

②Programmer

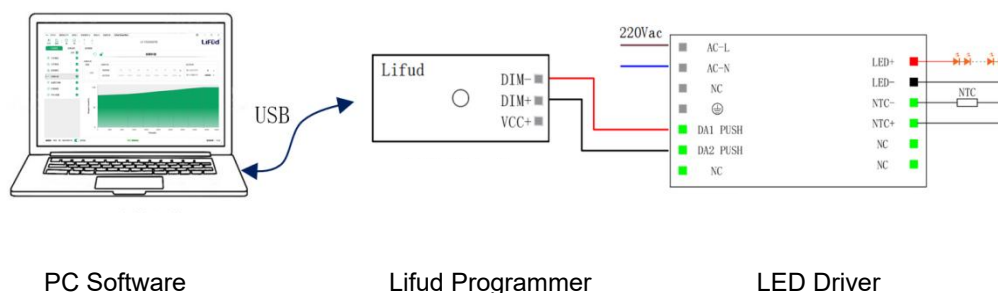

Note: When using the programmer, the driver must be powered on with AC for normal reading and writing.

③NFC APP



QR Code for NFC APP Download



NFC Software Interface

Note: When using the NFC APP for parameter setting, the driver is not allowed to operate while powered on. The driver must be powered off and completely discharged before it can read and write normally.

Certificates & standards

Approval marks – approval	UL, FCC, Class P, CE, UKCA, DALI-2
Standards	UL 8750; CSA C22.2 no.250.13; FCC Part 15B; EN 61347-2-13; EN 61347-2-1; EN 62493; EN 55015; EN 61547; EN 61000-3-2; EN 61000-3-3; IEC 61347-1; IEC 61347-2-13; DALI-2 certified (Part 101, 102, 207, 251, 252, 253)
Type of protection	IP20

Logistical data

Product	Packaging unit (Pieces/Unit)	Dimensions (L*W*H)	Volume	Gross weight
LF-GSD065YI	40	385 mm*285 mm*210 mm	23.04 dm ³	14.2kg±5%

Test equipment & condition

Test equipment	AC power source: CHROMA6530, digital power meter: CHROMA66202, oscilloscope: Tektronix DPO3014, DC electronic load: M9712B, LED board, constant temperature and humidity chamber, lightning surge generator: Everfine EMS61000-5B, rapid group pulse generator: Everfine EMS61000-4A, spectroanalyzer: KH3935, hi-pot tester: EEC SE7440, flicker tester (flicker-free coefficient test): Everfine LFA-3000, etc.
Compatibility of DALI dimming	Yuanhao Master, Simon Master, Philips Master DDBC120-DALI, OSRAM Master, Helvar Master 905 Router, Tridonic Master and HDL MC64-DALI431 Master

If there are no special remarks, the above parameters are tested at the ambient temperature of 25℃, humidity of 50%, maximum output load and input voltage of 230Vac/50Hz.

Additional information

1. It is recommended that user install the over voltage protection, under voltage protection and surge protection devices in the power supply circuits of light fixtures to ensure electricity safety.
2. The LED driver used in combination with the end device is one of the accessories of the whole light fixture, and the EMC of the whole light fixture is not only susceptible to the driver itself, but to the LED light fixture and the whole light fixture's wiring. Thus, the manufacturer of LED light fixture should re-confirm the EMC of the whole light fixture before the whole light fixture is finished.
3. The number of LED drivers that can be connected to a circuit breaker and the inrush current are tested under the same conditions.
4. The PC cover, casing and end cap for assembling the LED driver in the light fixture must meet the fire rating of UL94-V0 or above.
5. DC input is only for emergency.
6. In no-load condition, it is recommended that user not directly connect the LED driver to the light fixture in case that the light fixture is damaged.
7. When the load voltage is 10-46.4Vdc, it will output at a constant current of 1400mA; when the load voltage is over 46.4Vdc, it will output at a constant power of 65W±2W.
8. The default current of LED driver is 150mA and it can be set by Lifud NFC App and Lifud programmer (or FEIG NFC reader).
9. When using other DALI masters, please test their compatibilities with Lifud LED driver in advance.
10. If the parasitic capacitance between LEDs and the PCBA is too large, and the light fixture is grounded, there will be a slight flicker or afterglow at the moment of powering on, in standby mode, or when dimming to the lowest setting.
11. Lifud Technology Co., Ltd. reserves the right to interpret any content of this specification.

Transportation & storage

Suitable transportation means: vehicles, boats and aeroplanes.

In transit, it is necessary to prepare awnings for rain or sun protection. Moreover, please keep civilized loading and unloading to prevent the vibration or impact on LED driver as much as possible.

The storage of LED driver shall conform to the standard of Class I environment. When using LED drivers which have been stored for more than 6 months, please re-test them firstly. Do not use them unless they are tested to be qualified.

Cautions

Please use Lifud LED driver according to its parameters in the specification, otherwise the LED driver may malfunction.

Using any incompatible light fixtures or those that have not been certified may cause fire, explosion or other risks.

Man-made damage is beyond the scope of Lifud warranty service.

Disclaimer

Subject to change without notice. Errors and omissions excepted. Always make sure to use the most recent release.